

Toolbox Version
RMG SmartWinch Set Up

RX=Signal Switch position

1. Start: Winch OFF, TX ON, RX OFF, Stick DN.
2. Winch ON-begins 10sec count.
 - a. At 3 quick beeps, RX ON.
 - b. 1 long beep says close haul set.
3. RX OFF.
4. Stick UP, RX ON.
 - a. 1 long beep says full sheet out set.
5. RX OFF.
 - a. 3 beeps says end points stored.
 - b. This completes set for full End Points.
Turn off the winch to end session OR,
 - c. Leave winch ON to finish Set Up.
6. Remove Drum.
7. Stick DN, RX ON.
 - a. Winch drives to start position.
 - b. 2 beeps says winch can be used.
 - c. Adjust sail booms at close haul.
8. Drive the winch till you like full sheet out position and close haul settings.
 - a. Sheet out to the final set.
 - b. RX OFF.
 - c. 3 beeps says setting stored.
 - d. Winch OFF if you are finished OR, leave ON for battery monitoring settings.
9. Battery monitoring, do A or B.
 - a. To enable, RX ON, 1, 2 or 3 beeps will confirm enable. Winch OFF.
 - b. To disable, RX ON then quickly OFF, 3 rising tones confirms monitoring OFF. Winch OFF.